

# LAN module update guide



1. If the LAN has already been connected to the local network with DHCP enabled you will have to use a app to locate the IP address of the device on the network. If static use the assigned IP address.
  - a. Enter the IP in to your web browser and press enter
  - b. Enter user name and password (default: admin)
  - c. Select Management tab
  - d. Select file and press update

A screenshot of a web management interface. On the left, there is a vertical navigation menu with three items: 'Advanced', 'Management', and 'Account'. The 'Management' item is highlighted. The main content area is titled 'Access point setting' and contains two sections. The first section, 'Access point setting', has two rows: 'Firmware version' with the value 'V1.0.14' and 'MAC address' with the value 'F0FE6BBA21AE'. The second section, 'DHCP setting for STA', has five rows: 'IPDHCP Mode' with a dropdown menu set to 'STATIC', 'IP address' with the value '192.168.40.37', 'Subnet mask' with the value '255.255.255.0', 'Gateway address' with the value '192.168.40.254', and 'DNS server address' with the value '192.168.1.253'. At the bottom of the main content area, there is a note: '★Note: After changing the setting, the device must be restarted.' and a blue 'Save' button. In the top right corner of the interface, there are language options: '中文 | English'.