

# SUN2000-(8KTL-20KTL)-M2 User Manual

This document describes the SUN2000-8KTL-M2, SUN2000-10KTL-M2, SUN2000-12KTL-M2, SUN2000-15KTL-M2, SUN2000-17KTL-M2 and SUN2000-20KTL-M2 in terms of their installation, electrical connections, commissioning, maintenance, and troubleshooting.

## About This Document

> Safety Information

> Overview

## Storage

> Installation

> Electrical Connections

> Commissioning

> Man-Machine Interaction

> Maintenance

> Handling the Inverter

> Technical Data

## Grid Codes

## Device Commissioning

## Resetting Password

## Rapid Shutdown

## Locating Insulation Resistance Faults

## Acronyms and Abbreviations

Search in this manual

Rate and give feedback: ★★★★★

## Resetting Password

1. Ensure that the SUN2000 connects to the AC and DC power supplies at the same time. Indicators and are steady green or blink at long intervals for more than 3 minutes.
2. Perform the following operations within 3 minutes:
  - a. Turn off the AC switch and set the DC switch at the bottom of the SUN2000 to OFF. Wait until all the LED indicators on the SUN2000 panel turn off.
  - b. Turn on the AC switch and set the DC switch to ON. Ensure that the indicator is blinking green at long intervals.
  - c. Turn off the AC switch and set the DC switch to OFF. Wait until all LED indicators on the SUN2000 panel are off.
  - d. Turn on the AC switch and set the DC switch to ON.
3. Reset the password within 10 minutes. (If no operation is performed within 10 minutes, all inverter parameters remain unchanged.)
  - a. Wait until the indicator blinks green at long intervals.
  - b. Obtain the initial WLAN hotspot name (SSID) and initial password (PSW) from the label on the side of the SUN2000 and connect to the app.
  - c. On the login screen, set a new login password and log in to the app.

- Translation
- Favorite
- Download

Updated: 2021-08-30

## Related

### Documents

SUN2000-(20KTL, 29.9KT L, 30KTL, 36KTL, 40KTL)-M3 Gebruikershandleiding

SUN2000-(3KTL-10KTL)-M1 User Manual

SUN2000-(20KTL, 29.9KT L, 30KTL, 36KTL, 40KTL)-M3 User Manual

## Digital Signature

### File

Digital Signature Authentication Mode

## Share



Figure C-1 Setting the password




4. Set router and management system parameters to implement remote management.

- Setting router parameters

Log in to the FusionSolar app, choose **Device Commissioning > Settings > Communication configuration > Router connection settings**, and set router parameters.


Figure C-2 Setting router parameters

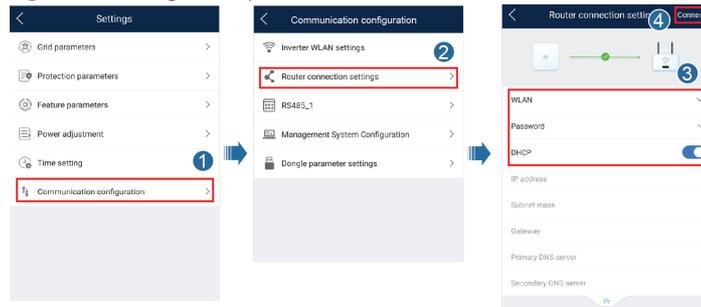

- Setting management system parameters

Log in to the FusionSolar app, choose **Device Commissioning > Settings > Communication configuration > Management System Configuration**, and set management system parameters.

Figure C-3 Setting management system parameters

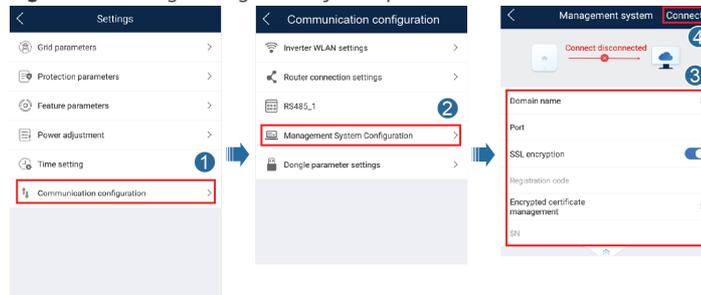

- (Optional) Resetting the WLAN password


We use cookies on this site, including third party cookies, in order for the site to work properly and to analyse traffic, offer enhanced functionality, social media features and personalise content and ads. [Learn more](#)

[Settings > cookie settings](#)

[Accept Cookies](#)

[Previous](#)

Figure C-4 Resetting the WLAN password

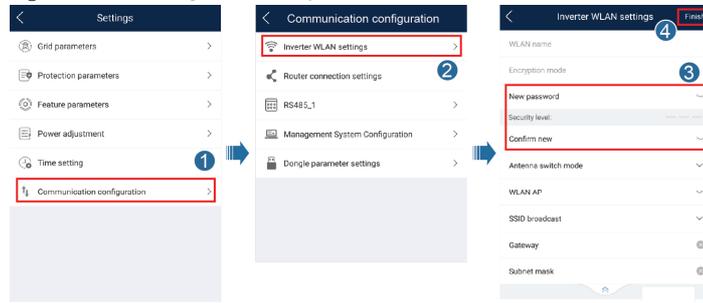

## Follow Us



About Huawei



How to Buy



Partner



Resources



Others



Huawei e+ App



Copyright © 2021 Huawei Technologies Co., Ltd. All rights reserved.

[Privacy](#) | [Terms of use](#) | [RSS](#) | [Subscribe](#) | [Sitemap](#)

We use cookies on this site, including third party cookies, in order for the site to work properly and to analyse traffic, offer enhanced functionality, social media features and personalise content and ads. [Learn more](#)

> [cookie settings](#)

✓ Accept Cookies

< Previous