


APPENDIX 1: MOUNTING SOLAR PANELS WITH 60MM PANEL CLAMPS


1 COMPONENTS

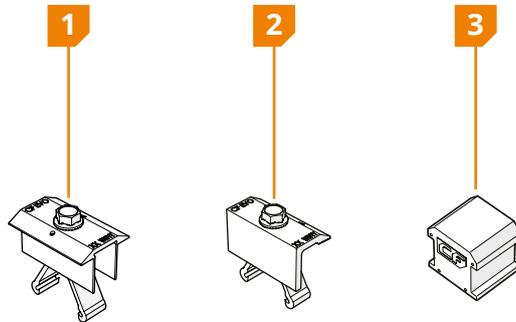


COMPONENT	ARTICLE NUMBER
1 ClickFit EVO 60 Mid Clamp Black	1008021-B
2 ClickFit EVO 60 End Clamp Black	1008022-B
3 ClickFit EVO End Cap without end clamp support	1008066(-B)

2 MOUNTING THE FIRST PANEL


1 OPTIONAL: CLICK THE AUXILIARY SET ON THE PANEL.

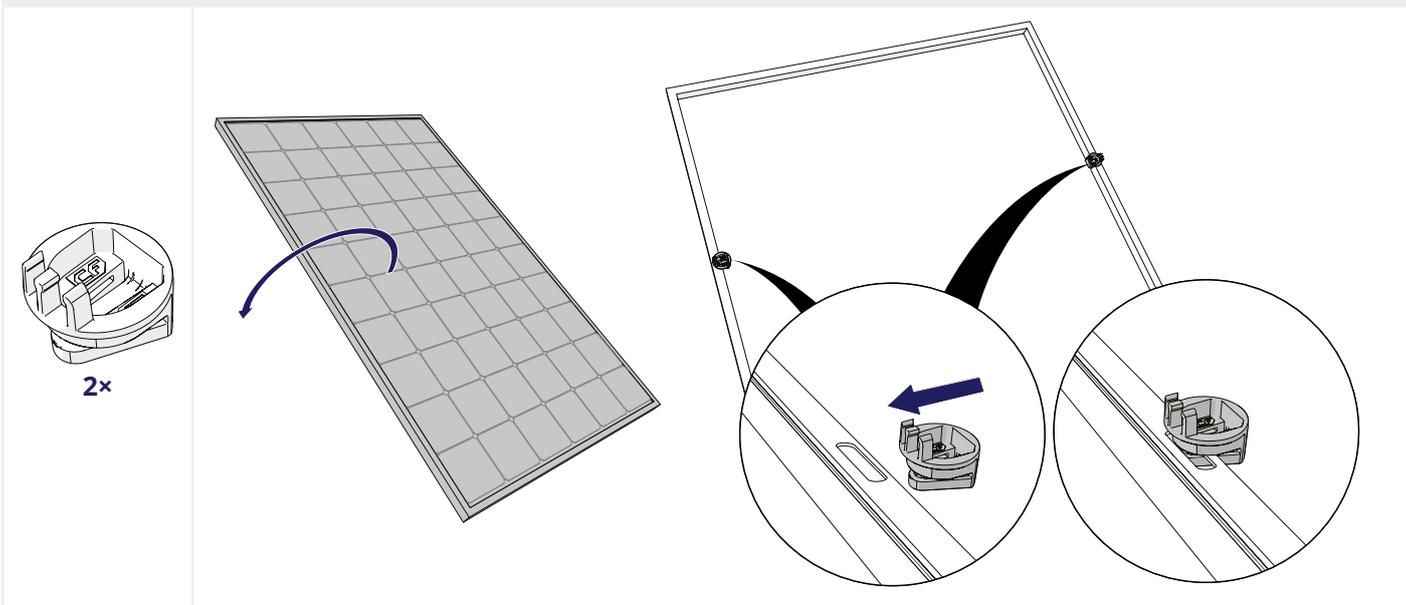


2 OPTIONAL: CLICK THE CABLES OF THE PANEL FIRMLY INTO THE CABLE CLAMP.

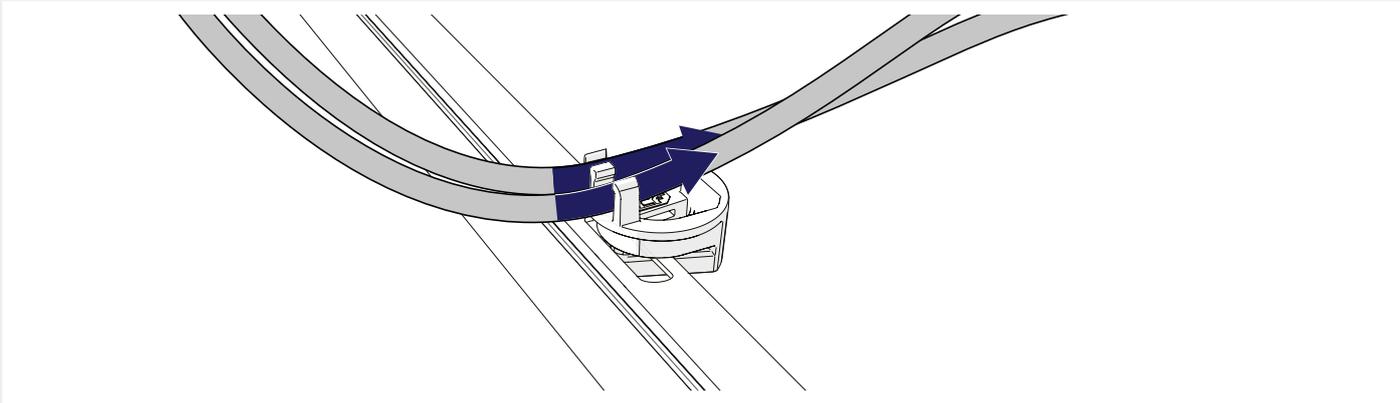


3 SLIDE THE END CAPS ONTO THE RAILS.

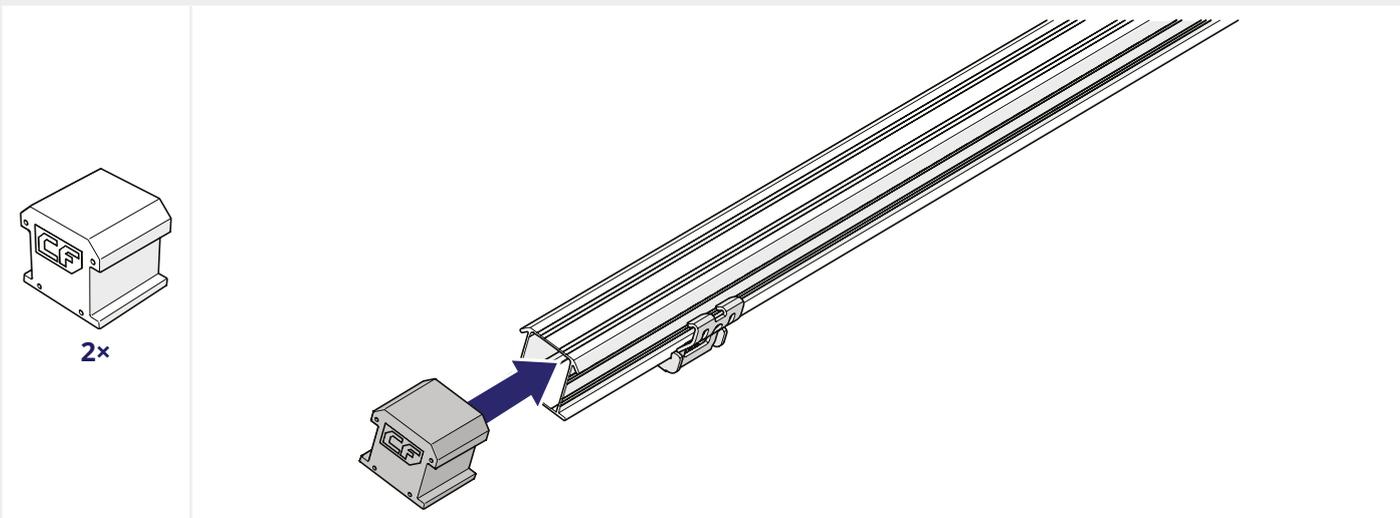


4 CLICK THE CLICKFIT EVO 60 END CLAMPS ON THE RAILS.

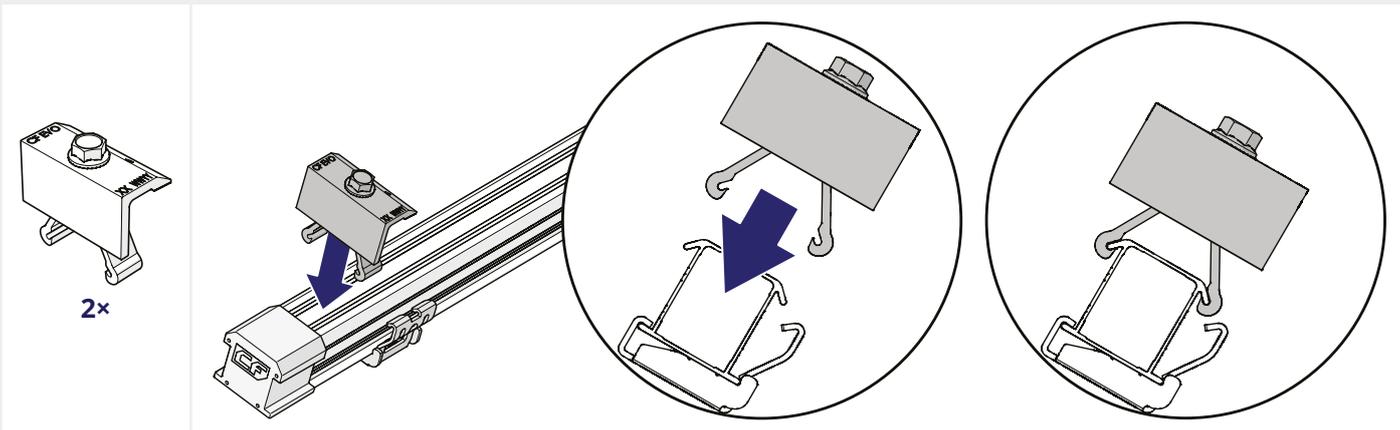


5 PLACE THE PANEL ON THE RAILS AND SLIDE THE PANEL AGAINST THE END CLAMPS.

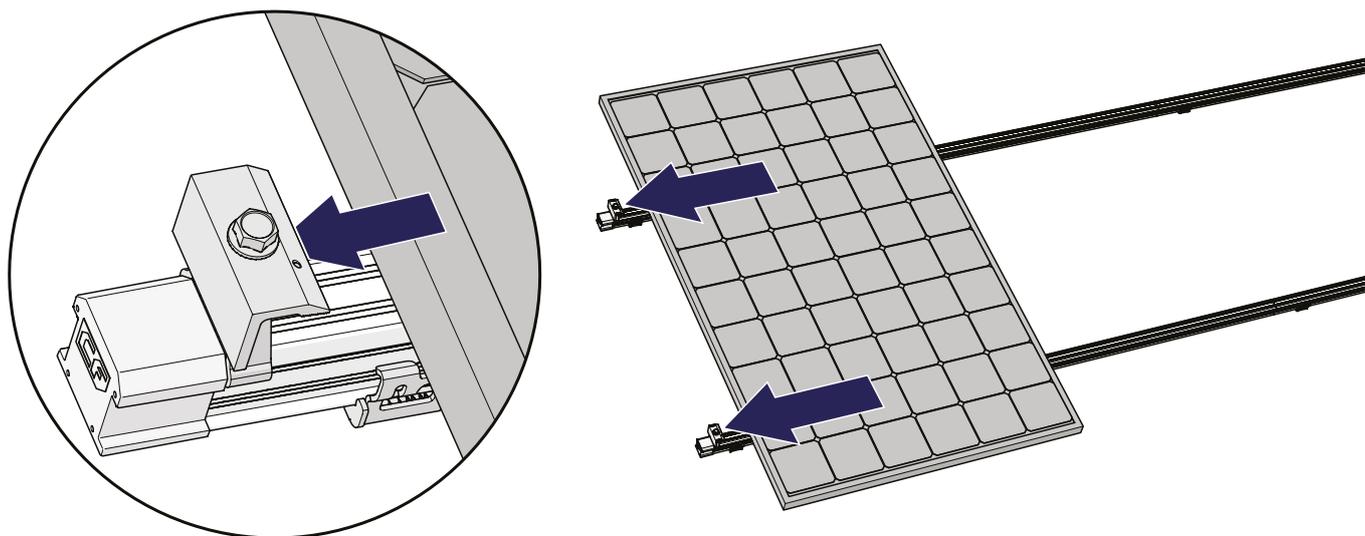

6 FASTEN THE SCREW OF THE END CLAMPS TO SECURE THE PANEL. APPLY A TORQUE OF 16.5 NM.

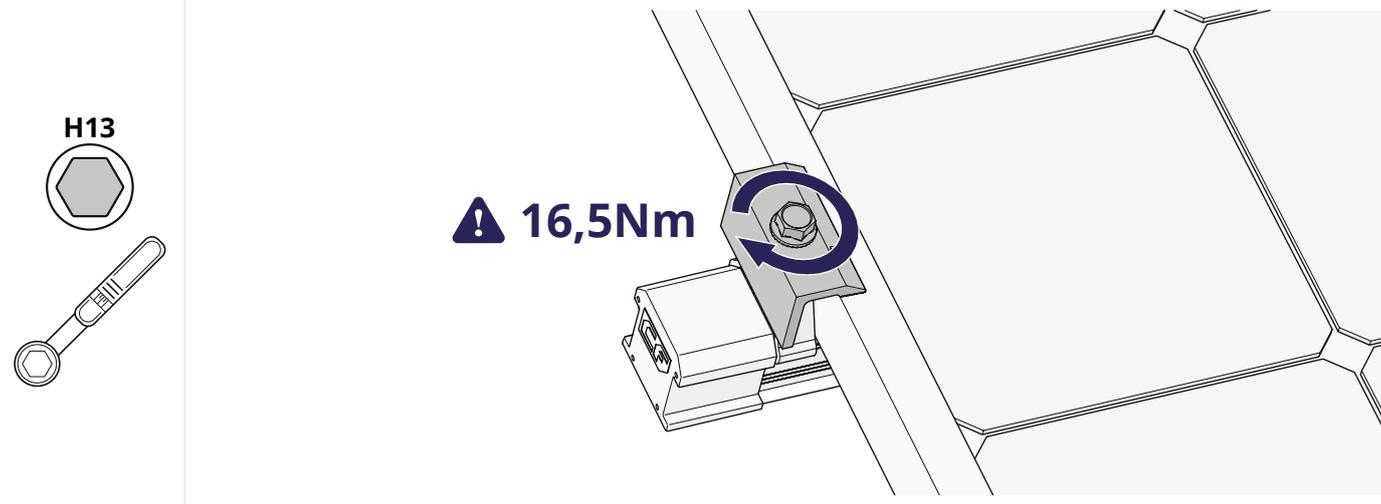

7 CLICK THE CLICKFIT EVO 60 MID CLAMPS ON THE RAILS.

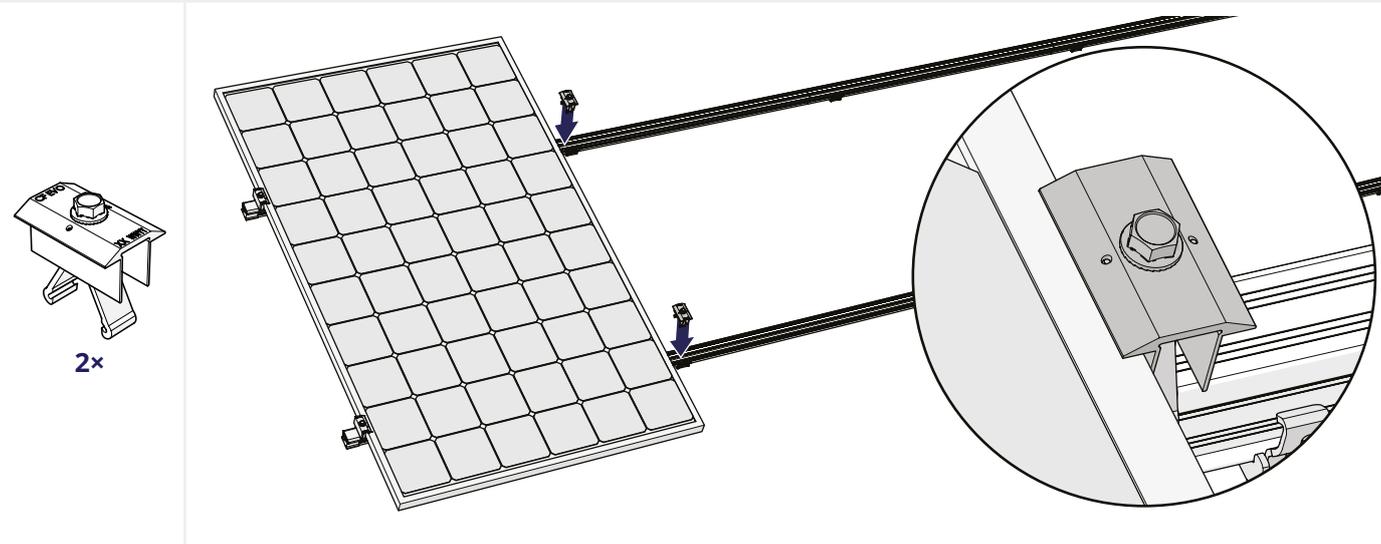


3 MOUNTING THE FOLLOWING PANELS



Optional: Repeat steps 1.1. and 1.2.: Click the Auxiliary set on the panel and Click the cables of the panel firmly into the cable clamp.




Optional: Repeat step 1.7.: Click the ClickFit EVO 60 Mid clamps on the rails..

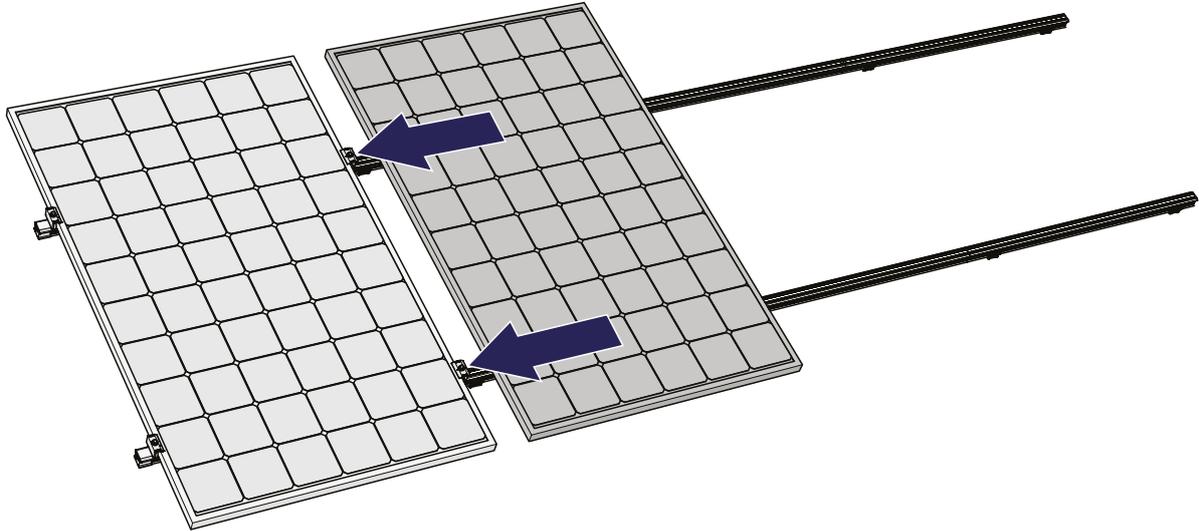

8 FASTEN THE SCREW OF THE MID CLAMPS TO SECURE THE PANEL. APPLY A TORQUE OF 16.5 NM.

H13

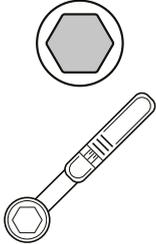

Repeat the steps in this chapter for all panels except for the last panel of the row.




Optional: Repeat steps 1.1. and 1.2.: Click the Auxiliary set on the panel and Click the cables of the panel firmly into the cable clamp.




Optional: Repeat step 1.7.: Click the ClickFit EVO 60 Mid clamps on the rails..

1 OPTIONAL: SAW THE MOUNTING RAILS TO SIZE


- If the overhang is **less** than 250 mm beyond the last hangerbolt, keep a rail overhang of 50-70 mm for mounting the end cap (art. no. 1008066(-B)).
- If the overhang is **more** than 250 mm beyond the last hangerbolt, install an extra hangerbolt. Extend the mounting rail to at least 40 mm beyond the extra hangerbolt and attach the mounting rail to it. The extra 40 mm provides sufficient length to fit an end cap (art. no. 1008066(-B)) to the mounting rails.

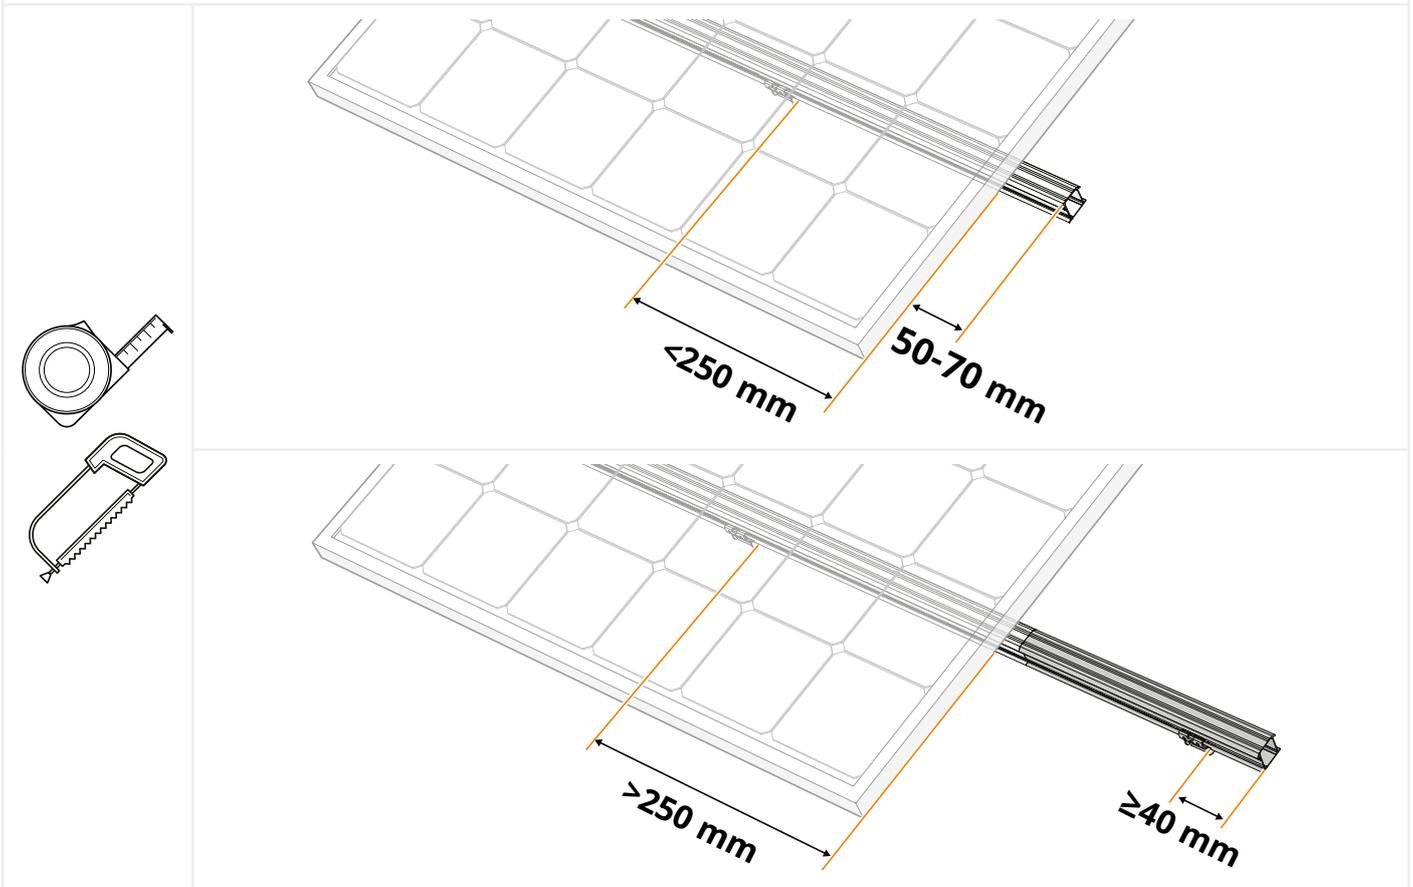

2 CLICK THE CLICKFIT EVO 60 END CLAMPS ON THE RAILS.

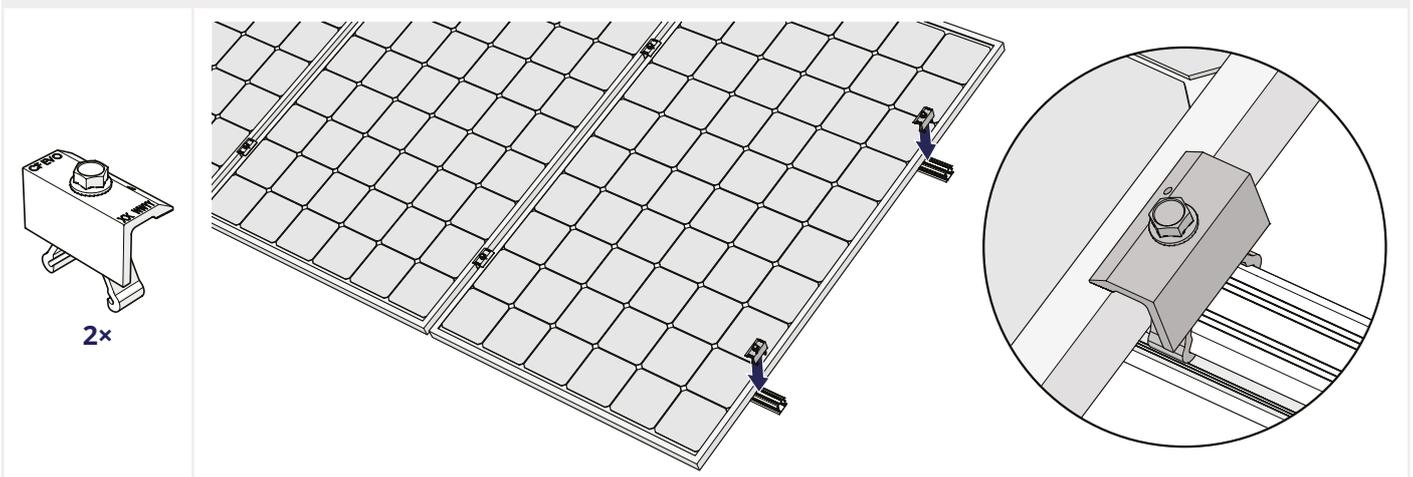

3 FASTEN THE SCREW OF THE END CLAMPS TO SECURE THE PANEL. APPLY A TORQUE OF 16.5 NM.

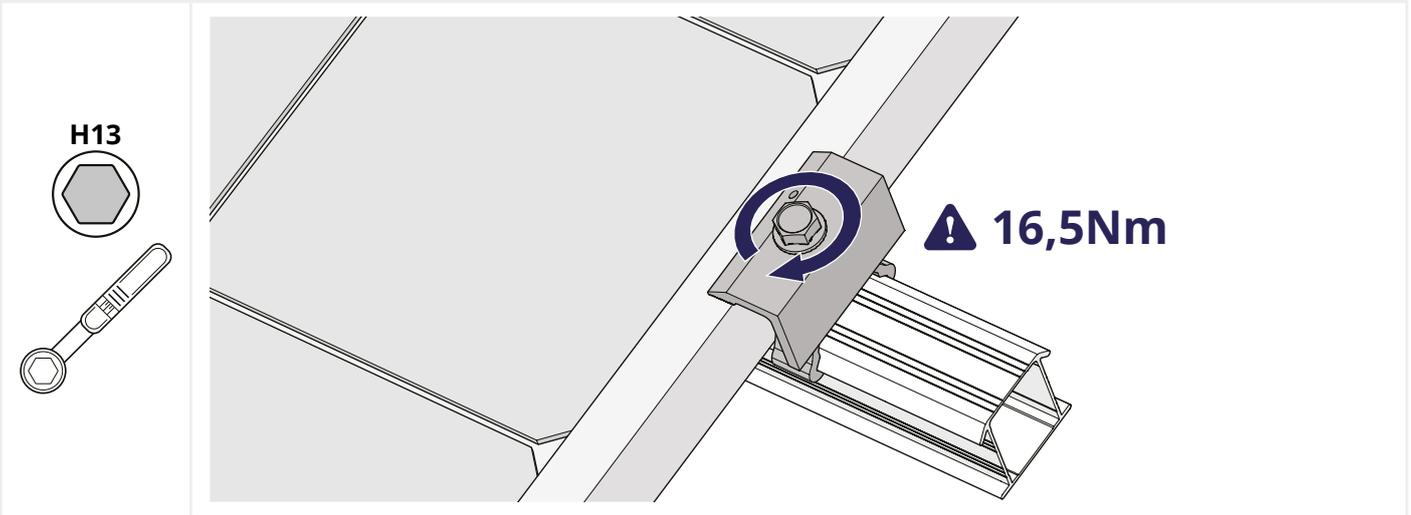

4 SLIDE THE END CAPS ONTO THE RAILS.

